

Empfänger/Receiver Reflex Wheel Pro4 Gyro wasserfest

ALLGEMEIN

Der **Reflex PRO 4 Empfänger mit Gyro Funktion** verfügt über 4 Kanäle.



Zusätzlich zu seinen normalen Funktionen verfügt dieser Empfänger noch über eine intelligente Fahrzeugsteuerung, welche sicherstellt, dass das Fahrzeug in Kurven und auf unebenen Untergründen immer in der gewünschten Fahrtrichtung bleibt.

EINBAU DES EMPFÄNGERS


Verwenden Sie für die Befestigung des Empfängers, dass im Lieferumfang enthaltene doppelseitige Klebeband.

Befestigen Sie diesen auf einer sauberen und horizontalen Ebene.

Bitte beachten Sie die richtige Einbauposition !!

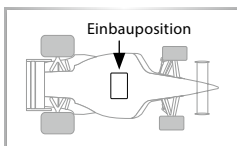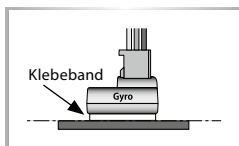

BINDING DES EMPFÄNGERS

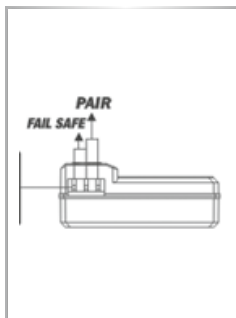


1. Fernsteuerung und Empfänger einschalten
2. "Binding-Kabel" mit Empfänger verbinden „PAIR-PINs“ Anschluss siehe Abb. verwenden
3. LED leuchtet dauerhaft-Binding abgeschlossen
4. Empfänger ausschalten und „Binding-Kabel wieder entfernen.

EINSTELLUNG FAIL SAVE

Funktion nur auf Kanal 2 !!

1. Fernsteuerung und Empfänger ausschalten
2. "Binding-Kabel" mit Empfänger verbinden " FAIL SAVE – PINs" Anschluss siehe Abb. verwenden
3. Empfänger einschalten (LED blinkt)
4. Fernsteuerung in die gewünschte " FAIL-SAVE" Position bringen und einschalten
5. Position halten bis die LED dauerhaft leuchtet
6. Empfänger ausschalten und „Binding-Kabel“ wieder entfernen


EINSTELLUNG EMPFINDLICHKEIT

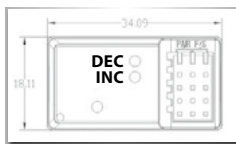

Einstellung der Lenkungs-korrektur

Hier wird eingestellt, wie stark der Empfänger beim Lenken korrigieren soll.

EINSTELLUNG DEC

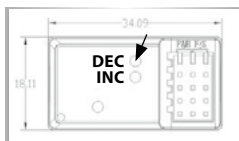

Sollte die Gyro Funktion in die falsche Richtung wirksam sein, so können Sie dies mit der DEC Taste verändern.

- Empfänger einschalten und danach die DEC Taste 3-4 Sekunden gedrückt halten
- die LED am Empfänger blinkt 2 x und somit wurde die Richtung geändert

1. Änderung der Einstellung - Auswahl zwischen 8 Stufen („INC/DEC“ +/-)
 - Stufe 1: niedrige Empfindlichkeit
 - Stufe 8: höchste Empfindlichkeit
2. Die rote LED am Empfänger zeigt durch die Blink-Anzahl (1-8) an, in welcher Stufe sie sich befinden.
3. Durch längeres drücken (2-3 Sek.) der „INC“+ Taste kann die Gyro Funktion deaktiviert werden. (LED blinkt 2 Sek. schnell)

TECHNISCHE DATEN

Kanäle:	4
Frequenz:	2,4 G
Eingangsspannung:	6V
Anmaße:	34x14x18mm

Konformitätserklärung: Hiermit erklärt TAMIYA-CARSON Modellbau GmbH & Co. KG, dass der Funkanlagentyp 500404325 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar.

www.carson-modelsport.com/de/produkte.htm

Gewährleistung: www.carson-modelsport.com/de/service/gewaehrleistung/



Bedeutung des Symbols auf dem Produkt, der Verpackung oder Gebrauchsanleitung. Elektrogeräte sind Wertstoffe und gehören am Ende der Laufzeit nicht in den Hausmüll! Helfen Sie uns bei Umweltschutz und Ressourcenschonung und geben Sie dieses Gerät unentgeltlich bei den entsprechenden Rücknahmestellen/Händlern ab. Fragen dazu beantwortet Ihnen die für die Abfallbeseitigung zuständige Organisation oder Ihr Fachhändler. Der Endnutzer ist für das Löschen personenbezogener Daten der zu entsorgenden Altgeräte selbst verantwortlich.

Receiver Reflex Wheel Pro4 Gyro water resistant

GENERAL

The **Reflex PRO 4 receiver with integrated gyro** has 4 channels.



In addition to its normal functions, this receiver has an intelligent vehicle controller, which ensures that the vehicle always keeps to the desired direct of travel on bends or uneven surfaces.

MOUNTING THE RECEIVER


Use the double-sided adhesive tape included in the delivery to secure the receiver.

Secure it to a clean and horizontal surface.

Please take note of the correct mounting position!

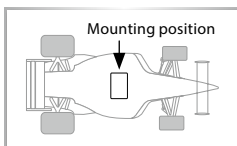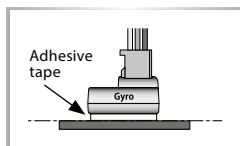

BINDING THE RECEIVER

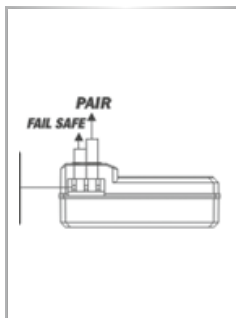


1. Switch on the receiver and Remote Control
2. Connect the "binding cable" to the receiver using the „PAIR PINs“ connection, see figure.
3. LED flashes permanently - binding completed
4. Switch off the receiver and remove the „binding cable“ again.

SETTING FAIL SAFE

Works only on channel 2!

1. Switch off Remote control and the receiver
2. Connect the "binding cable" to the receiver using the " FAIL SAFE PINs" . connection, see figure.
3. Switch on the receiver (LED flashes)
4. Bring the remote control into the desired " FAIL-SAVE" position and switch on.
5. Hold the position until the LED is lit permanently.
6. Switch off the receiver and remove the "binding cable".

SETTING THE SENSITIVITY

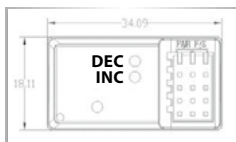


Adjustment of steering correction

How strongly the receiver shall correct when steering is adjusted here.

1. Alteration of the setting – Choice of 8 levels („INC/DEC“ +/-):
- **Level 1:** low sensitivity
- **Level 8:** highest sensitivity
2. The red LED on the receiver indicates the present level by the number of flashes (1-8) .
3. the gyro function can be deactivated by pressing the "INC"+ button for 2-3 seconds. (LED flashes quickly for 2 seconds)

SETTING DEC

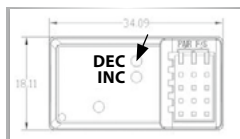

Should the gyro function be active in the wrong direction, you can alter this situation with the DEC button.

- Switch on the receiver and then press and hold the DEC button for 3-4 seconds
- The LED on the receiver flashes 2x to indicate that the direction has been altered

SPECIFICATIONS

Channels:	4
Frequency:	2.4 GHz
Input voltage:	6V
Dimensions:	34x14x18mm

Declaration of conformity: TAMIYA-CARSON Modellbau GmbH & Co. KG hereby declares that the radio equipment type 500404325 conforms to Directive 2014/53/EU. The complete text for the EU declaration of conformity is available at the following Internet address: www.carson-modelsport.com/de/produkte.htm

Warranty declaration: www.carson-modelsport.com/de/service/gewaehrleistung/



The meaning of the symbol on the product, packaging or instructions. Electrical appliances are valuable products and should not be thrown in the dust bin when they reach the end of their serviceable life! Help us to protect the environment and conserve resources and bring this device to a corresponding disposal point/dealer free of charge. For disposal-related queries, contact the organisation responsible for waste disposal or your specialist retailer. The end user is responsible for deleting personal data on old devices.